2. Disassembly and Reassembly

2-1 Removal of COVER-DUST ASS'Y

1) Detach the COVER-DUST ASS'Y with a flat head screw driver.

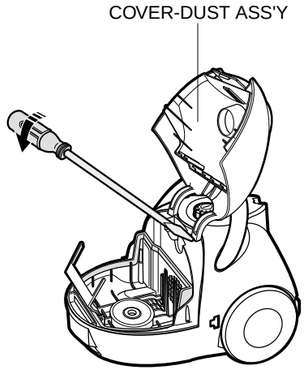

2-2 Disassembly of COVER-DUST ASS'Y

Datach the INDICATOR ASS'Y and DAMPER ASS'Y with a flat head screw driver.

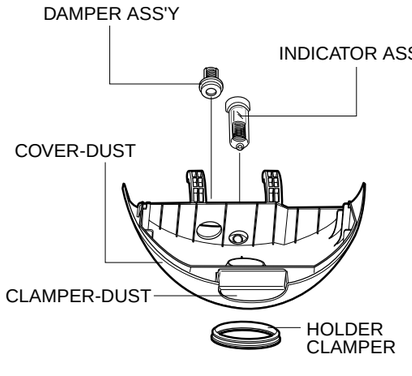

2-3 Removal of Main Body

Release 3 screws and detach the BODY-CONTROL ASS'Y with a flat head screw driver.

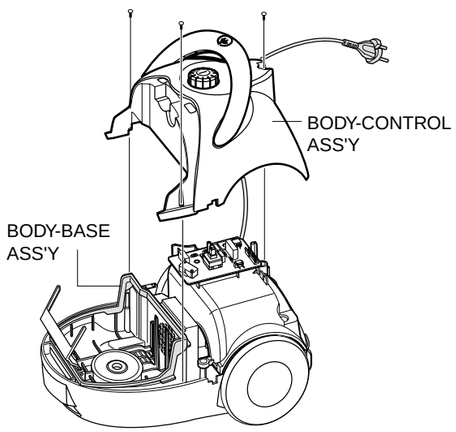

2-4 Removal of Main PCB Assembly

Separate the wire-connectors form the MAIN-PCB ASS'Y, loosen the screw and detach it from CASE-UP ASS'Y.

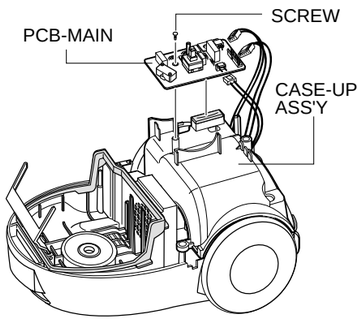

2-5 Removal of CASE UP Assembly

Loosen the two screws and detach CASE UP ASS'Y.

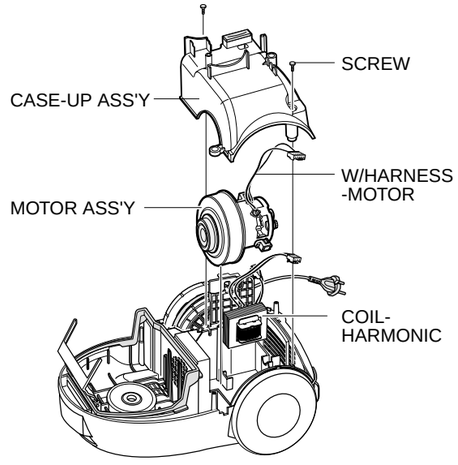

2-6 MOTOR replacement

1) Loosen the screw and detach the W/HARNESS-MOTOR from the MOTOR.

2) Separate CUSHION-MOTOR F and SUPT-MOTOR ASS'Y from the MOTOR.

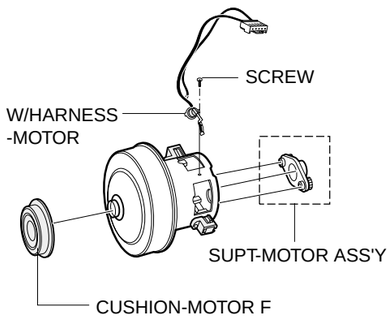

2-7 Cord Reel Replacement

1) Detach the GUARD-CORD with a flat head screw driver.

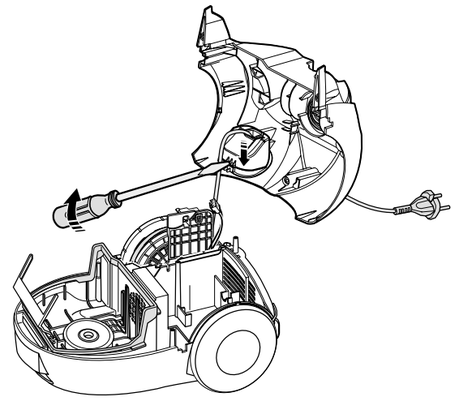

2) Separate the CORD-REEL from the body widening the gap between BODY-BASE and BODY-C/REEL.

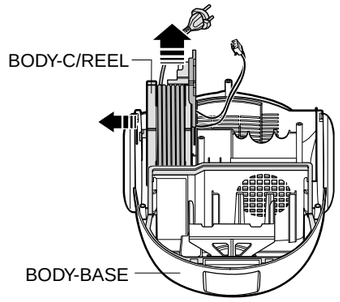

3) Hold the body reel and wind the power cord 3~4 times.
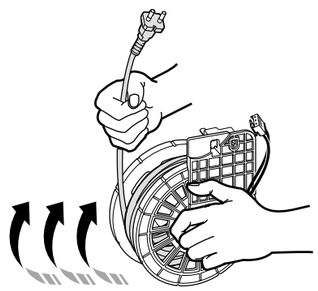
4) When the winding is completed, immediately assemble the CORD-REEL to the body.